



Setup & Display

- ! Upon first installation or after a power outage, the display will flash once power is connected/reconnected. To reset, press the memory button until the table goes back to the minimum height (65cm). Please remember to reset whenever the frame is disconnected from the power supply.

To save energy, the display will automatically turn off after 10 seconds. Press any button on handset to wake the display.

Manual Height Adjustment



Worktop goes up or down when the arrow button is depressed and held. The display shows the current height in centimetres (cm).

The motor stops once maximum height is achieved.

Preset Height Adjustment (Automatic)



Press any preset button twice. Once two beeps sound the worktop automatically travels to the preset height.

- ! Press any handset button to stop the worktop moving.

The display will flash until the target height is achieved.

Preset Height Adjustment (Manual)



Press any hold any preset button for at least 2 seconds. The worktop will travel until it reaches the preset height. The worktop will stop moving if the button is released.

The display will flash until the target height is achieved.

Setting the Preset Height



When the worktop is at the preferred height, press both the memory and one preset button at the same time for 2 seconds. 2 short beep sounds confirm the height is saved. Repeat the procedure for the 4 preset buttons.

To check the preset height, press the memory button. The preset height will then be displayed. To display the current height press the memory button again.